

Decoder Control

Syntax /decoder_control.cgi?command=[&next_url=]

Value	Description
0	Continuously Up
1	Stop Up
2	Continuously Down
3	Stop Down
4	Continuously Left
5	Stop Left
6	Continuously Right
7	Stop Right
...	Reserved
25	Find Center/Home Position
26	Vertical Patrol
27	Stop Vertical Patrol
28	Horizon Patrol
29	Stop Horizon Patrol
30	Set Preset 1
31	Goto Preset 1
32	Set Preset 2
33	Goto Preset 2
34	Set Preset 3
35	Goto Preset 3
36	Set Preset 4
37	Goto Preset 4
38	Set Preset 5
39	Goto Preset 5
40	Set Preset 6
41	Goto Preset 6
42	Set Preset 7
43	Goto Preset 7
44	Set Preset 8
45	Goto Preset 8
46	Set Preset 9
47	Goto Preset 9
48	Set Preset 10
49	Goto Preset 10
50	Set Preset 11
51	Goto Preset 11
52	Set Preset 12
53	Goto Preset 12
54	Set Preset 13
55	Goto Preset 13
56	Set Preset 14
57	Goto Preset 14
58	Set Preset 15
59	Goto Preset 15
60	Set Preset 16
61	Goto Preset 16
...	Reserved
90	Continuously Diagonal Up Right
91	Continuously Diagonal Up Left
92	Continuously Diagonal Down Right
93	Continuously Diagonal Down Left
94	IO Output High
95	IO Lutput Low